



ENERGY ATR3

385/65R22.5

20PR 160K/158L

www.aufine.com


! WARNING

Failure to comply with these mounting instructions can cause the bead to break and the assembly to burst with force sufficient to cause serious injury or death!

TIRE MOUNTING INSTRUCTIONS

1. Only special trained persons should mount tires. SEE OSHA wallchart, "Demounting and Mounting Procedures for Truck/Bus Tires" and OSHA Standard 1910.177.*
2. Always match rim diameter with tire diameter. Use only on radial rim of proper size. Never use any part that is bent, rusted, cracked or worn.
3. Always inspect inside of tire before mounting to make sure it is clean and dry. Moisture in the tire can damage the casing.
4. Always lubricate tire beads and rim with approved rubber lubricant.
5. Always inflate the assembly in a tire inflation cage or other equivalent restraining device. Use a clip-on air chuck and an in-line air valve with gauge. Stand back from cage!
6. Always inflate with dry air from compressor systems having working moisture filters.
7. Never inflate above 40 psi (275 kpa) maximum to seat beads.
8. After beads fully seat, inflate to recommended pressure.

STOCK TIRES IN DRY AREA

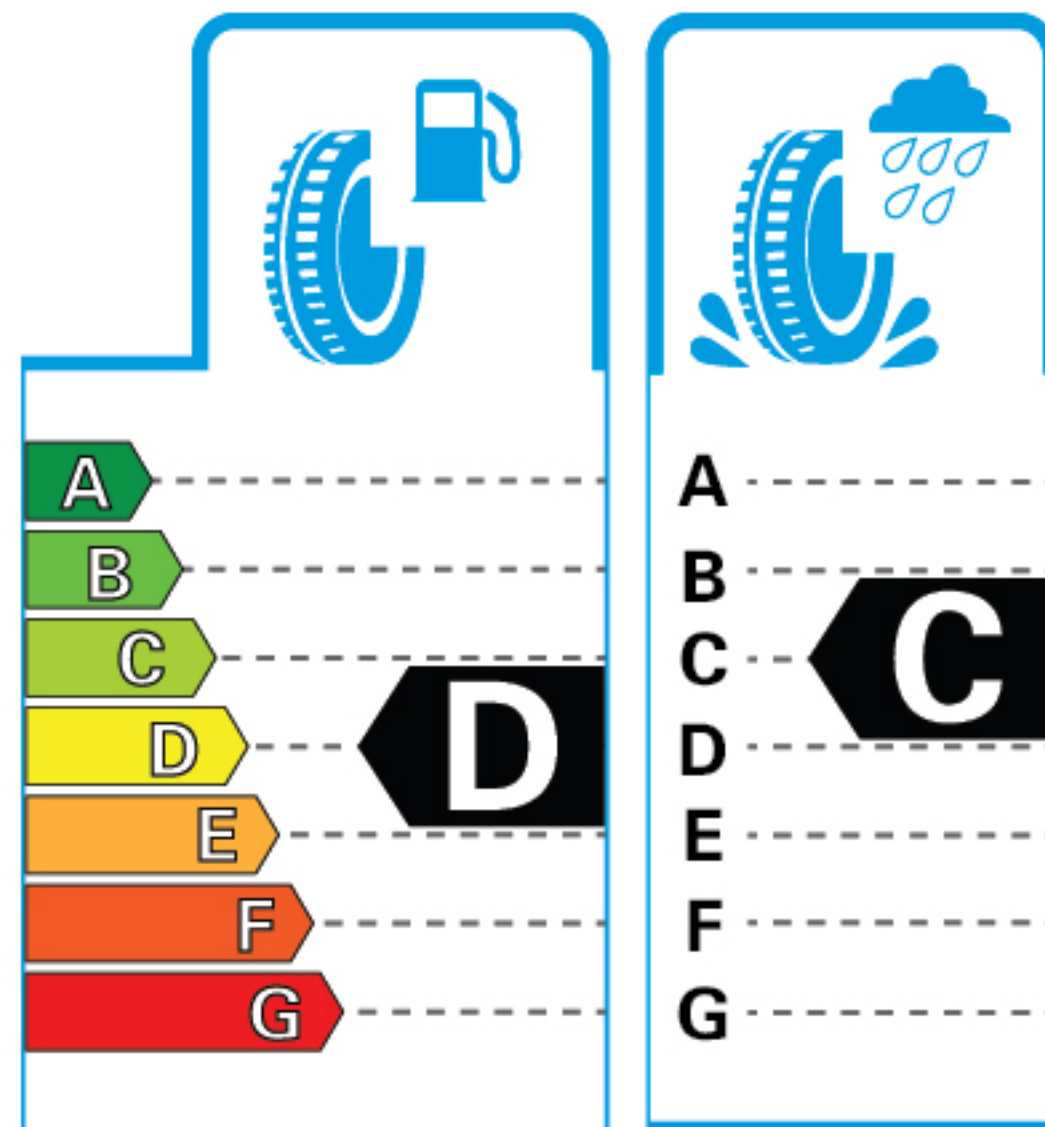

1222/2009 - C3